



D-Link DSL-2640U

Wireless ADSL2/2+ 4-port Ethernet Router

ADIM ADIM KURULUM KILAVUZU



Paket İÇeriĐi



DSL-2640U ADSL MODEM



Kullanım Kılavuzu CD



RJ-45 Ethernet Kablosu




RJ-11 Telefon Kablosu



Power Adaptörü


Cihazın Bağlantısını Yapmak

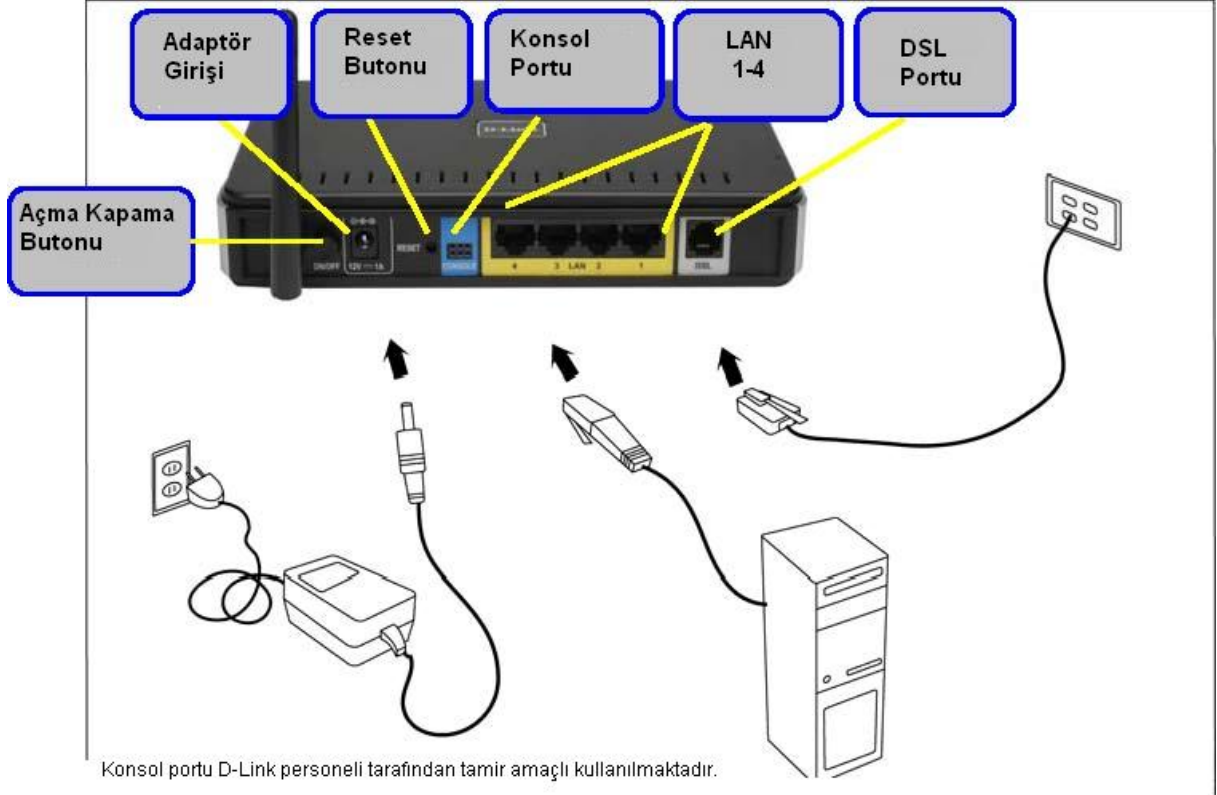

Cihazın Ayarlarını Yapmak

NOT: Ayarlarınızı yaparken mutlaka Ethernet kablosunu bağlayınız.

- 1- ADSL modemi Ethernet kablosu ile bilgisayarınıza bağlayınız.
- 2- Ethernet kartınızın özelliklerine girip Otomatik IP al seçeneğini şaretleyiniz

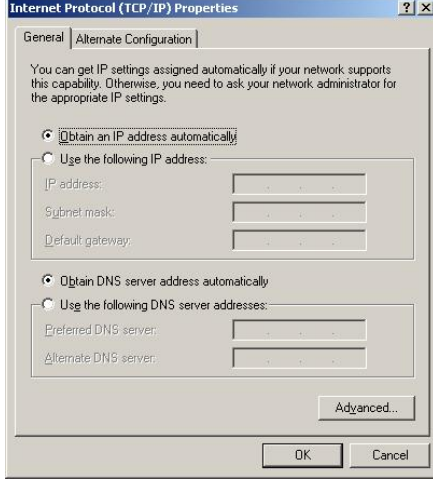

3-WEB tarayıcınızı (İnternet Explorer, Firefox v.s.) açınız.


4- Adres satırına <http://192.168.1.1> yazınız.




5- ADSL modem giriş penceresinde sorulan kullanıcı adı ve şifre penceresine **Kullanıcı Adı: admin Password: admin** yazınız.




6- DSL Auto-connect yanındaki isreti kaldiriniz

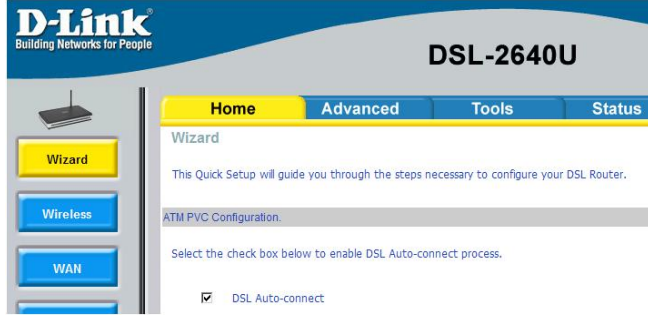


7- Gelen sayfada **VPI:8, VCI:35** yapiniz. **Enable Quality Server** isaretleyiniz. **Next** butonuna basiniz.

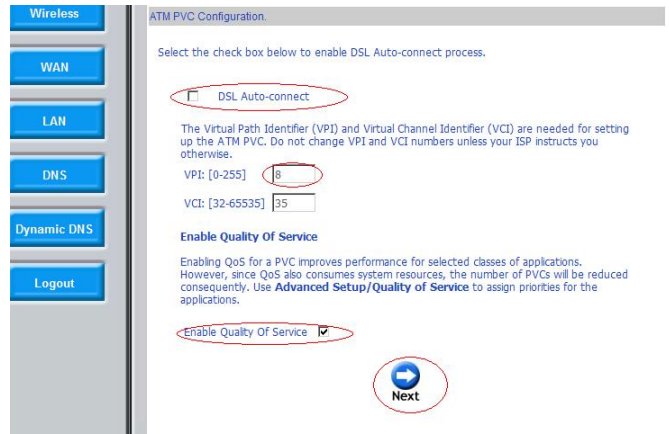

8- **PPP over Ethernet (PPPoE)** seciniz. **Next** butonuna basiniz.

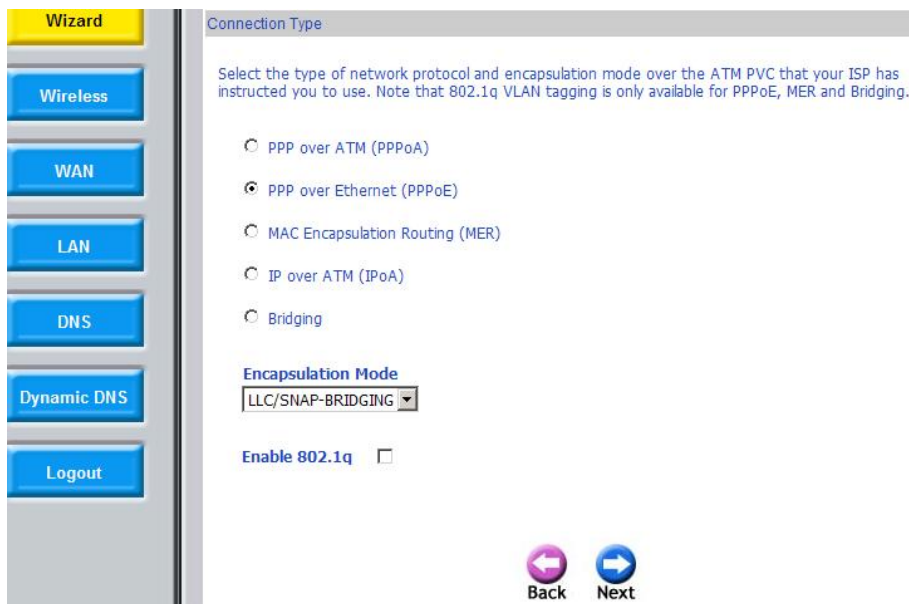


9- ADSL kullanıcı adı ve şifrenizi giriniz. **Next** butonuna basınız.

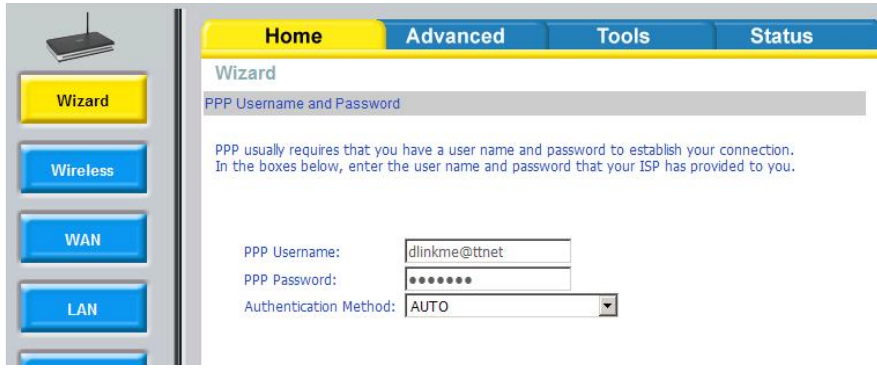


The screenshot shows the 'Wizard' setup page with the 'Advanced' tab selected. The page title is 'Wizard' and the sub-section is 'PPP Username and Password'. Below the title, there is a text box containing the text: 'PPP usually requires that you have a user name and password to establish your connection. In the boxes below, enter the user name and password that your ISP has provided to you.' Below this text, there are three input fields: 'PPP Username:' with the value 'dlinkme@ttnet', 'PPP Password:' with a masked password '.....', and 'Authentication Method:' with a dropdown menu set to 'AUTO'. On the left side of the page, there is a vertical menu with buttons for 'Wizard', 'Wireless', 'WAN', 'LAN', 'DNS', 'Dynamic DNS', and 'Logout'. The 'Wizard' button is highlighted in yellow.

10- **Next** butonuna basınız.

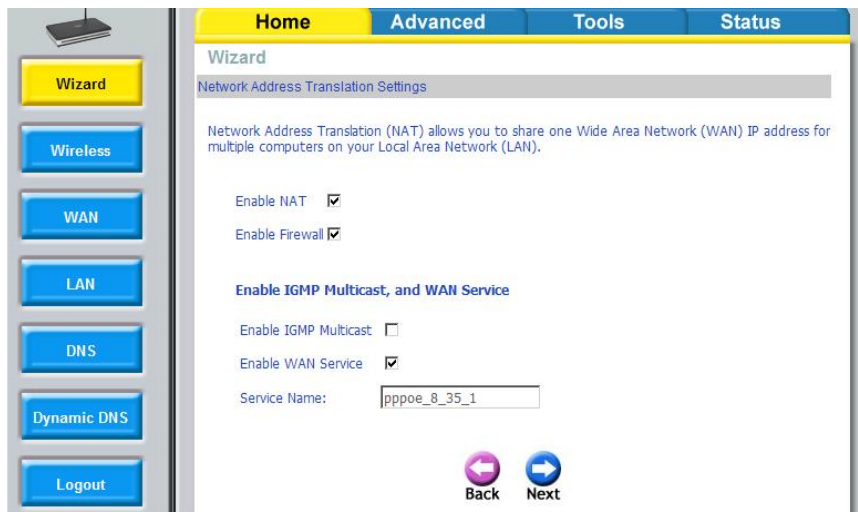

The screenshot shows the 'Wizard' setup page with the 'Advanced' tab selected. The page title is 'Wizard' and the sub-section is 'Network Address Translation Settings'. Below the title, there is a text box containing the text: 'Network Address Translation (NAT) allows you to share one Wide Area Network (WAN) IP address for multiple computers on your Local Area Network (LAN).' Below this text, there are two checked checkboxes: 'Enable NAT' and 'Enable Firewall'. Below these, there is a section titled 'Enable IGMP Multicast, and WAN Service' with two checkboxes: 'Enable IGMP Multicast' (unchecked) and 'Enable WAN Service' (checked). Below these, there is a 'Service Name:' field with the value 'pppoe_8_35_1'. At the bottom of the page, there are two buttons: 'Back' and 'Next'. On the left side of the page, there is a vertical menu with buttons for 'Wizard', 'Wireless', 'WAN', 'LAN', 'DNS', 'Dynamic DNS', and 'Logout'. The 'Wizard' button is highlighted in yellow.

11- Next butonuna basınız.

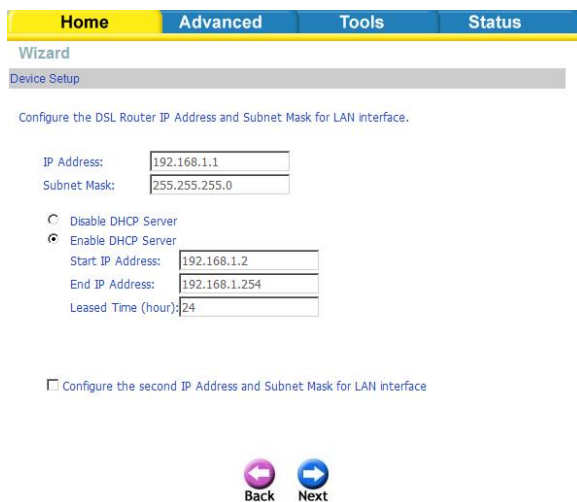

The screenshot shows the 'Wizard' setup page with the 'Advanced' tab selected. The page title is 'Wizard' and the sub-section is 'Device Setup'. Below the title, there is a text box containing the text: 'Configure the DSL Router IP Address and Subnet Mask for LAN interface.' Below this text, there are two input fields: 'IP Address:' with the value '192.168.1.1' and 'Subnet Mask:' with the value '255.255.255.0'. Below these, there are two radio buttons: 'Disable DHCP Server' (unchecked) and 'Enable DHCP Server' (checked). Below these, there are three input fields: 'Start IP Address:' with the value '192.168.1.2', 'End IP Address:' with the value '192.168.1.254', and 'Leased Time (hour):' with the value '24'. Below these, there is a checkbox labeled 'Configure the second IP Address and Subnet Mask for LAN interface' which is unchecked. At the bottom of the page, there are two buttons: 'Back' and 'Next'. On the left side of the page, there is a vertical menu with buttons for 'Wizard', 'Wireless', 'WAN', 'LAN', 'DNS', 'Dynamic DNS', and 'Logout'. The 'Wizard' button is highlighted in yellow.

12- Wireless ayarlar için Enable Wireless işaretleyiniz. SSID kısmına bir isim yazınız. Bu isim sizin kablosuz ağı görüntüle dediğinizde modemizin kablosuz ağ adı olarak görünecektir **Next** butonuna basınız.

Home Advanced Tools

Wizard

Wireless

Enable Wireless

Enter the wireless network name (also known as SSID).
SSID:

13- **Save Reboot** butonuna basınız.



Wizard

Setup - Summary

Make sure that the settings below match the settings provided by your ISP.

VPI / VCI:	8 / 35
Connection Type:	PPPoE
Service Name:	pppoe_8_35_1
Service Category:	UBR
IP Address:	Automatically Assigned
Service State:	Enabled
NAT:	Enabled
Firewall:	Enabled
IGMP Multicast:	Disabled
Quality Of Service:	Enabled

Click "Save/Reboot" to save these settings and reboot router. Click "Back" to make any modifications.
NOTE: The configuration process takes about 1 minute to complete and your DSL Router will reboot.

WİRELESS ŞİFRELEME

14- **Home**→**Wireless** bölümüne geliniz. **Country** seçeneğini TURKEY yapınız. **Apply** butonuna basınız. Daha sonra Şifreleme işlemi için **Security** butonuna basınız.

Home Advanced Tools Status

Wireless -- Basic

This page allows you to configure basic features of the wireless LAN interface. You can enable or disable the wireless LAN interface, hide the network from active scans, set the wireless network name (also known as SSID) and restrict the channel set based on country requirements. Click "Apply" to configure the basic wireless options.

Enable Wireless

Hide Access Point



SSID:

BSSID: 02:18:11:76:5D:F2

Country:

Enable Wireless Guest Network

Guest SSID:

15- Şifreleme yapacağınız **SSID** seçiniz. Network Authentication **WPA2-PSK** yapınız. En az 8, En çok 63 karakterden oluşan içerisinde Türkçe karakter kullanmadan şifrenizi yazıp **Apply** butonuna basınız.

The screenshot shows the 'Wireless -- Security' configuration page in a D-Link router's web interface. The page has a navigation bar with 'Home', 'Advanced', 'Tools', and 'Status' tabs. On the left, there is a sidebar with buttons for 'Wizard', 'Wireless', 'WAN', 'LAN', 'DNS', and 'Dynamic DNS'. The main content area is titled 'Wireless -- Security' and contains the following fields:

- Select SSID: dlink
- Network Authentication: WPA2-PSK
- WPA Pre-Shared Key: [masked with dots] [Click here to display](#)
- WPA Group Rekey Interval: 0
- WPA Encryption: AES
- WEP Encryption: Disabled

At the bottom of the form, there are two buttons: 'Back' and 'Apply'.

Ayarların Kayıt edilmesi ve Cihazın Yeniden Başlatılması

ADSL modem içerisinde yapılan bütün değişikliklerin aktif duruma geçmesi için ayarların kayıt edilip tekrardan başlatılması gerekmektedir. Bu işlem için ADSL modem arayüzünden **Tools→System** menüsüne geçiniz. **Save&Reboot** butonuna basınız. Bu işlem bittikten sonra ADSL modeminizi kullanabilirsiniz.

Devam eden sorunlarınız için lütfen 0 212 289 56 59 D-Link Türkiye Ofisini haftaiçi 09:00- 18:00 arası arayabilirsiniz yada support.tr@dlink-me.com destek adresine mail gönderebilirsiniz.

MODEMİNİZİ İYİ GÜNLERDE KULLANMANIZ DİLEĞİ İLE.